



**SIDE VIEW**

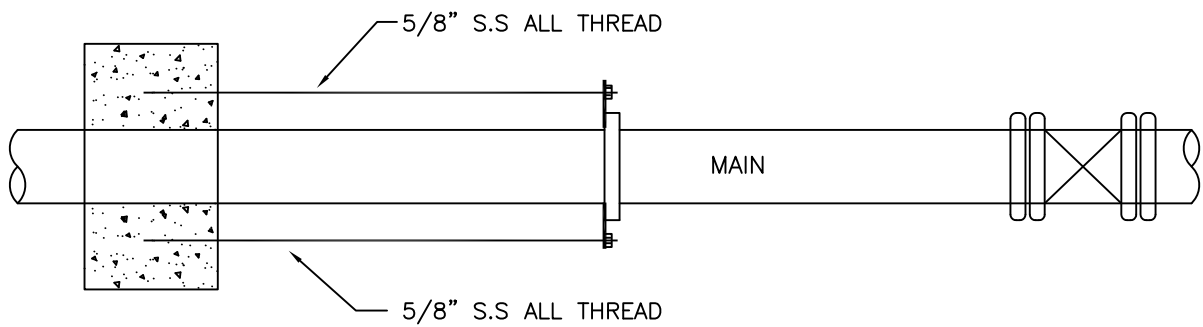

**TOP VIEW**

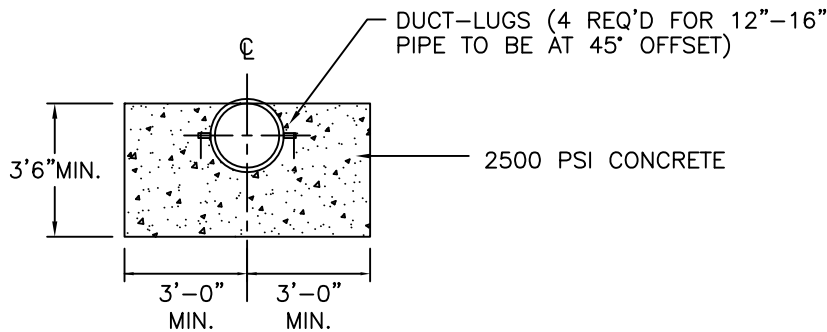

**FRONT VIEW**

NOTE:

1. DEAD MANS ARE TO BE SET PRIOR TO THE FIRST JOINT FROM VALVE. UNLESS END-OF-LINE, THEN THERE WILL BE A TIE-BACK ASSEMBLY ON EACH SIDE OF VALVE.
2. ALL JOINTS BETWEEN CONCRETE AND VALVE SHALL BE RESTRAINED.